

#BW1 - WHEEL INSTALLATION INSTRUCTIONS

Caterpillar 257 & 247 & "B" Series
ASV RC 50 & 60, ST/SC 50

The OEM set up has a wiper ring that looks like a large washer between the wheel and frame. Remove this ring and do not install it.

Your new wheel from Bair Products will have a wear washer bonded to the back side of the wheel. Install the new wheel and tighten the retaining nut. If the wheel is bound up, then remove the wheel and take a flat tip screw driver and knock off the washer and reinstall.

Under some circumstances the location of the axle being a few thousandths either way may bind up the wheel.